





## INSTRUCTIONS FOR USE

# RAID ON FORT KNOX



### Loading the Cartridge and Starting the Game.

1. Turn your VIC-20 OFF before inserting or removing the cartridge.
2. Insert the cartridge (label side up) into the wide expansion port on the back of the computer.
3. Turn the VIC-20 ON. After a second or two, the opening title should appear on the screen. (If the title doesn't appear, turn your VIC-20 off then back on).

### Adjusting Screen Position

To center the picture use the  and  keys. Each time you press the  key, the picture will move to the right, and when the  key is pressed, the picture will move towards the bottom of your TV screen. Keep using these two keys until you are satisfied the picture is centered within your screen. (NOTE: Once the game has begun you can not change the screen colors).

### Eliminating Screen Flutter

On some TV sets with automatic fine tuning your screen may "flutter" up and down when using a computer or video game. To correct this, hold down the  key and hit the  key. (NOTE: Doing this with a standard TV set may cause the screen to flutter).

### TO START:

Press space bar to choose challenge level 1-4. Then type the YELLOW f1 key.

### OBJECT/RULES:

The U.S. has abandoned the gold standard, but there's still a lot of gold left in Fort Knox. Your mission is to sneak through the maze, grab a gold bar, & find your way back to your hideout. Take as much time as you need to get to the gold, but once you take a gold bar, time is limited.

Also . . . deadly panthers patrol the maze passages. It will take you several trips to clean out the vaults, but the rewards are great. You get \$\$ for each gold bar, and a bonus maze for clearing all the vaults.



## SCORING:

The \$\$ value earned varies with the time it takes you to make it back to the hideout. No money earned if you run out of time. Bonus collected for emptying all vaults. Bonus gives you 100 points times the number of panthers at each level. Maximum bonus 10. Empty all vaults and move bonus maze up 1 level.

## GAME CONTROL:

JOYSTICK — Left, Right, Up & Down  
moves you each direction.

KEYBOARD — L = Left, ; = Right, P = Up, . = Down  
Pressing selected key moves you each  
direction.